melnor®

Aqua Timer™ *Model 3015*
Operating Instructions

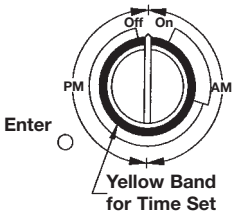

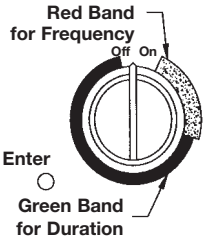

BATTERY INSTALLATION - Open the battery door by removing three screws. Install one new 9V alkaline battery as shown. Replace the battery door and secure with the screws. Once the battery is installed, and before attaching the unit to the faucet, manually open and close the valve. To open the valve, turn the dial to the "On" position. You will hear a clicking sound which signifies the battery is installed correctly and the unit is ready to operate. The valve will take several seconds to open. Return the dial to the "Off" position (again you will hear a click) and follow the "Programming Your Timer" instructions below.

POSE DE LA PILE - Ouvrez le couvercle du boîtier en déposant les trois vis. Posez une pile alcaline de 9 volts neuve (voir schéma). Reposez le couvercle et les vis. Après installation de la pile, et avant de raccorder le minuteur au robinet, ouvrez et fermez la soupape à la main. Pour ouvrir la soupape, tournez le cadran sur la position «On». Vous entendez un déclic, indiquant que la pile est bien installée et que le minuteur est prêt à l'emploi. L'ouverture de la soupape prend quelques secondes. Replacez le cadran sur la position «Off» (vous entendez de nouveau un déclic) et suivez le mode de programmation qui suit.

INSTALACIÓN DE LA BATERÍA - Abra la puerta de la batería, quitando los tres tornillos. Instale una batería alcalina de 9 voltios nueva, tal como se muestra. Vuelva a colocar la puerta de la batería, y asegúrela con los tornillos. Una vez instalada la batería, y antes de sujetar la unidad a la llave del grifo, abra y cierre la válvula manualmente. Para abrir la válvula, gire el dial hacia la posición "On" (conectado). Usted oirá un sonido "clic" que significa que la batería está colocada correctamente y la unidad está lista para funcionar. La válvula tardará unos segundos en abrirse. Retorne el dial a su posición "Off" (desconectado) (nuevamente usted oirá un "clic") y siga las instrucciones de "Programación de su reloj automático" que se encuentran debajo.

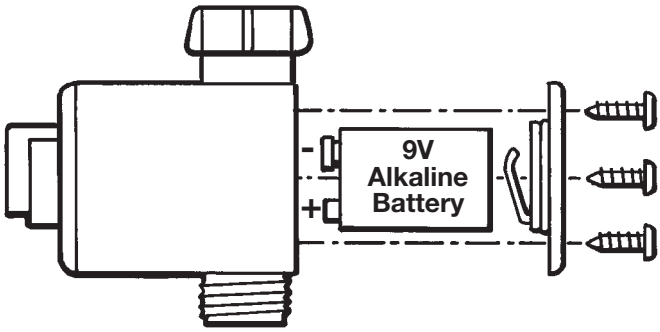

FOR PROPER FUNCTION, use only **Energizer®** Model No. 522 or **Duracell®** Model No. MN1604 9V Alkaline batteries. *Always install a fresh battery.*

EN VUE D´UN BON FONCTIONNEMENT, n'utilisez qu'une pile alcaline de 9 volts n° 522 **Energizer**MD ou n° MN1604 **Duracell**MD. *Installez toujours une pile neuve.*

PARA UN FUNCIONAMIENTO CORRECTO, utilice solamente baterías alcalinas de 9 voltios: modelo N° 522 de **Energizer**MR o modelo N° MN1604 de **Duracell**MR. *Siempre instale una batería fresca.*

Designed for outdoor use only
Designed for clean water use only
Designed for residential use only

Turn off faucet if unit is not going to be used for an extended period. At the end of the watering season, turn off the faucet and remove the unit.

Programming Your Timer

1) **TO START -** Turn the yellow dial to the "Off" position and press the "Enter" button.
2) **SET THE TIME -** The "Set Time" light will start flashing yellow. Rotate the dial to the nearest hour (in the yellow band) and press the "Enter" button.
3) **SET THE START TIME -** The "Start Time" light will be flashing yellow. Rotate the dial to the nearest hour (in the yellow band) and press the "Enter" button.
4) **SET THE WATERING FREQUENCY -** The "Frequency" light will start flashing red. Rotate the dial to the desired setting (in the red band), as described below and press the "Enter" button.

Hours	**Days**
8 = (3) times a day	2 = every other day
12 = (2) times a day	3 = every third day
24 = (1) time a day	7 = once a week

NOTE: "Frequency" can be set as either hours or days, **not both**.

5) **SET THE DURATION -** The "Duration" light will start flashing green. Rotate the dial to the required number of minutes (in the green band) and press the "Enter" button. **Leave the dial set to the desired number of minutes.**
6) **START YOUR TIMER -** Attach the unit to your faucet and turn the faucet on. Watering will begin according to your set program.

In case of a mistake or incomplete programming, you have to finish all five steps and then start the program again with step 1.

TO MANUALLY TURN WATER ON OR OFF

1) Turn the yellow dial to "On" or "Off", to manually control the water. The timer will automatically turn off the water after 30 minutes.

2) To return to the program, rotate the yellow dial to the desired duration (green band) and press the “Enter” button.

OPERATING TIPS

1) Replace batteries at the beginning of every watering season.
2) Replace battery if you will be on vacation or away for an extended period.
3) Do not use rechargeable batteries.
4) Don’t expose the timer to temperatures less than 32˚ F (0˚ C).
5) Be careful moving the hose. Hard pulls may damage the faucet connection.
6) Clean filter washer regularly to prevent clogging.
7) To prevent corrosion, remove batteries when unit is not in use for extended periods of time.
8) Use only fresh alkaline batteries.
9) The timer can be programmed and then hooked up to the faucet.

FREQUENTLY ASKED QUESTIONS

Q If it’s going to rain, can I temporarily suspend the watering program?
A Yes, rotate the yellow dial to “Off” to disable the program. Rotate the dial to the desired duration and press the “Enter” button when you want to reactivate the program.
Q How can I change just the watering duration?
A Rotate the dial to the desired duration and press the “Enter” button.
Q Why is a light flashing on the front panel?
A The unit needs an input. Set the dial to any setting in the color band corresponding to the color of the light and press the enter button. Repeat until no lights are flashing. Then follow the 5 steps under programming the timer.
Q Why are all the lights on the front panel flashing?
A The battery needs to be replaced.
Q I am programming my timer at 8:00 a.m. on Monday morning. I set the start time to 6:00 a.m. and the frequency to three days. When will the watering begin?
A In this instance, watering will begin Thursday morning at 6:00 a.m. and repeat every three days after that.

TWO YEAR LIMITED WARRANTY

The Melnor Electronic Aqua Timer™ Model 3015 carries a TWO YEAR LIMITED WARRANTY. Melnor Inc. warrants the Product against defective material, workmanship, or design for the period of two years from the date of purchase. Its liability under this warranty shall be LIMITED TO the REPLACEMENT or REPAIR of the product as provided herein. NO OTHER REMEDY (including but not limited to, incidental or consequential damages and injuries to persons or property) shall be available to the purchaser. This warranty does not cover damages or malfunctions which result from abuse, neglect, normal wear and tear, accidents or improper installation and use. **THE WARRANTY DESCRIBED IN THIS PARAGRAPH SHALL BE IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

To make a claim during the TWO YEAR LIMITED WARRANTY PERIOD, please send the timer to the address below along with an explanation of the problems. Please allow 6-7 weeks for the return of the product. The warranty will only continue for the period remaining on the original two-year limited warranty.

FOR HELP AND MORE INFORMATION

Please contact our Parts and Service Department at (540) 722-5600;
In Canada (905) 792-9330; or Melnor on the web @ www.melnor.com

Melnor Inc.

Parts and Service Department 3085 Shawnee Drive, P.O. Box 2840 Winchester, VA 22604